


FIG.2

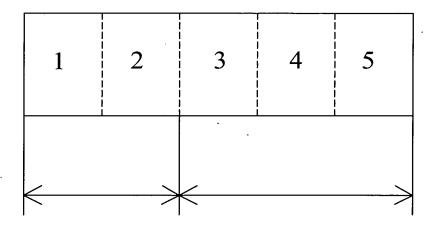

CODE FOR FREQUENCY CTCSS TONE CODE & DCD SELECTION CODE TABLE

## FREQUENCY DIVIDED INTO COUNTRIES

FREQ. TABLE(KOR)			
CH FREQ. [MHz]			
01	448.7500		
02	448.7625		
03	448.7750		
04	448.7875		
05	448.8000		
06	448.8125		
07	448.8250		
08	448.8375		
09	448.8500		
10	448.8625		
11	448.8750		
12	448.8875		
13	448.9000		
14	448.9125		
15	448.9250		
16	448.9375		
17	448.9500		
18	448.9625		
19	448.9750		
20	448.9875		
21	449.0000		
22	449.0125		
23	449.0250		
24	449.0375		
25	449.0500		

FREO. TABLE(U.S.A)		
CH	FREQ. [MHz]	
01	462.5625	
02	462.5857	
03	462.6125	
04	462.6357	
05	462.6625	
06	462.6857	
07	462.7125	
08	467.5625	
09	467.5875	
10	467.6125	
11	467.6375	
12	467.6625	
13	467.6875	
14	467.7125	

	FREQ. TABLE(NEWZL'D			
	CH	FREQ. [MHz]		
	01	476.4250		
	02	476.4500		
	03	476.4750		
	04	476.5000		
	05	476.5250		
	06	476.5500		
	07	476.5750		
	08	476.6000		
	09	476.6250		
	10	476.6500		
	11	476.6750		
	12	476.7000		
	13	476.7250		
	14	476.7500		
	15	476.7750		
	16	476.8000		
	17	476.8250		
į	18	476.8500		
	19	476.8750		
	20	476.9000		
	21	476.9250		
	22	476.9500		
	23	476.9750		
	24	477.0000		
	25	477.0250		
	26	477.0500		
	27	477.0750		
	28	477.1000		
	29	477.1250		
	30	477.1500		
	31	477.1750		
	32	477.2000		
	33	477.2250		
	34	477.2500		
	25	477 2750		

FREQ. TABLE(AUS)				
CH FREQ. [MHz]				
01	476.6250			
02	476.6500			
03	476.6750			
04	476.7000			
05	476.7250			
06	476.7500			
07	476.7750			
08	476.8000			
09	476.8250			
10	476.8500			
11	476.8750			
12	476.9000			
13	476.9250			
14	476.9500			
15	476.9750			
16	477.0000			
17	477.0250			
18	477.0500			
19	477.0750			
20	477.1000			
21	1 477.1250			
22	22   477.1500			
23	23   477.1750			
24	477.2000			

FREQ. TABLE(TAIWAN)		
CH	FREQ. [MHz]	
01	467.5125	
02	467.5250	
03	467.5375	
04	467.5500	
05	467.5625	
06	467.5750	
07	467.5875	
08	467.6000	
09	467.6125	
10	467.6250	
11	467.6375	
12	467.6500	
13	467.6625	
14	467.6750	

	FREQ. TABLE(SINGAPOL)			
CH	FREQ. [MHz]	CH	FREQ. [MHz]	
01	433.8000	06	433.9250	
02	433.8250	07	433.9500	
03	433.8500	08	433.9750	
04	433.8750	09	434.0000	
05	433.9000	10	434.0250	

477.2500 477.2750

477.3000

477.3250 477.3500 477.3750 477.4000

35 36 37

38 39

## FIG.4

CTCSS TONE CODE TABLE			
NO	O TONE PREQUENCY [Hz]		
000	NO CTCSS		
001	67.06		
002	69.37		
003	71.84		
004	74.33		
005	76.99		
006	79.65		
007	82.50		
008	85.34		
009	. 88.62		
010	91.38		
011	94.88		
012	97.46		
013	. 99.87		
014	103.39		
015	107.17		
016	110.85		
017	114.80		
018	118.60		
019	123.12		
020	127.50		
021	131.67		
022	136.69		
023			
024	145.96		
025	151.45		
026	156.59		
027	162.10		
028	168.01		
029	173.43		
030	180.21		
031	186.46		
032	193.16		
033	202.88		
034	206.78		
035	210.84		
036	217.96		
037	1 1		
	038 233.75		
	039 242.54		
040   250.06			

FIG.5

DCD CODE TABLE			
NO	CODE	NO	CODE
000	NO DCD	541	306
501	023	542	311
502	025	543	315
503	026	544	331
504	031	545	343
505	032	546	346
506	043	547	351
507	047	548	364
508	051	549	365
509	054	550	371
510	065	551	411
511	071	552	412
512	072	553	413
513	073	554	423
514	074	555	431
515	114	556	432
516	115	557	445
517	116	558	464
518	125	559	465
519	131	560	466
520	132	561	503
521	134	562	506
522	143	563	516
523	152	564	532
524	155	565	546
525	156	566	565
526	162	567	606
527	165	568	612
528	172	569	624
529	174	570	627
530	205	571	631
531	223	572	632
532	226	573	654
533	243	574	662
534	244	575	664
535	245	576	703
536	251	577	712
537	261	578	723
538	263	579	731
539	265	580	732
540	271	581	734
		582	743
	i l	583	754

